# Two-pour option 2

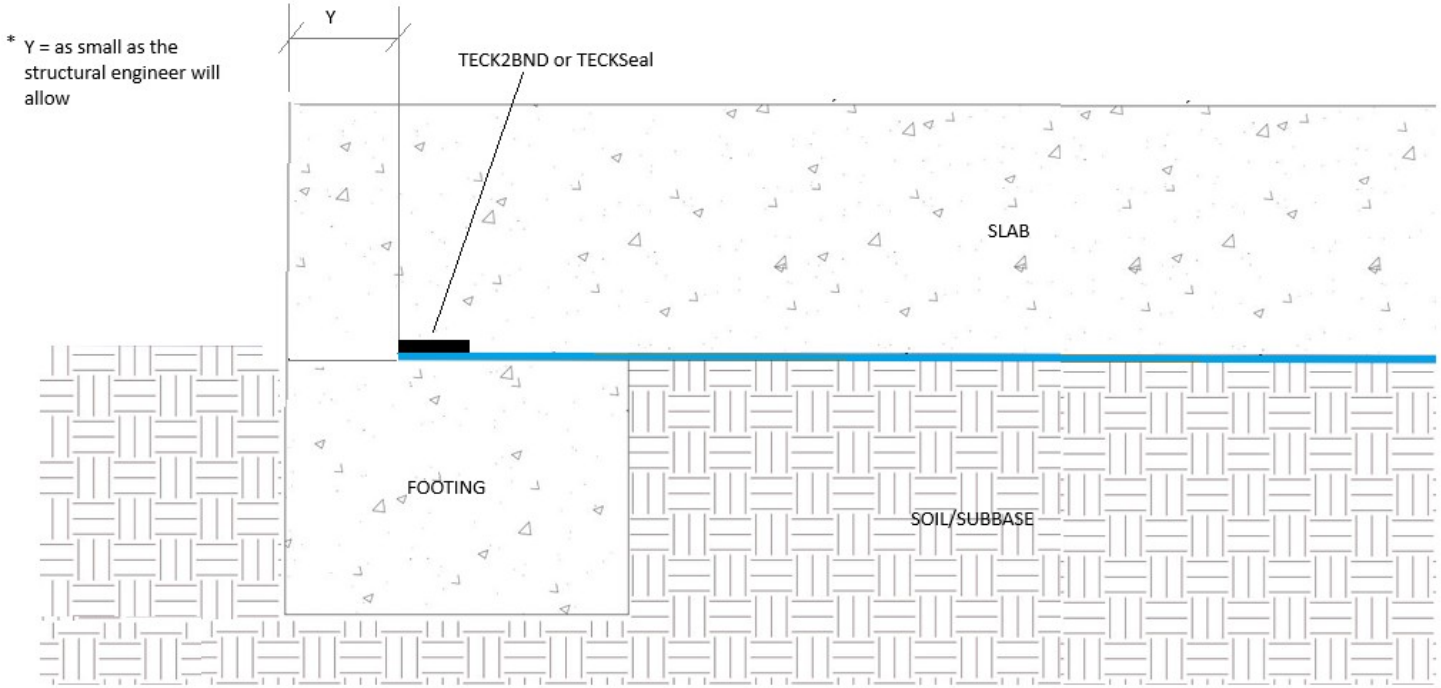


*See option 1:
Bring TECKFilm up the side of the slab as high as possible and seal with TECK2BND OR TECKSeal. If that is not acceptable, move to this option 2.

Conceptual Detail